

Schaltausgänge

Each object has different outputs for plugging in other devices. To use these options you need a special connector for the Box.

On this page you can configure your connected switching outputs.

Index

- [Summary](#)

Summary

If you connected your box at the appropriate way, you can activate or deactivate the four switching outputs of your box by two different schemas.

If you activate or deactivate the output IMMEDIATE this action is triggered at the same time by the box. The last known state is being updated.

On the other hand you can change the state of your outputs to the next (re-)boot of your box.

To get the current state of your outputs, click on the appropriate button. The states are updated by the box in the portal. This action can take to 120 sec.