


Positionsfiler

The position filter makes it possible to limit the position messages displayed in the position list, according to different filter criteria.


Index

- [Filter dialog](#)
 - [Possible filters](#)
 - [Filter selection](#)
 - [Filter status](#)

Filter dialog

The filter dialog can be controlled in the position list by clicking on the gear wheel symbol , to the right of the vehicle selection box.

A sub-menu opens, from which the entry "[Filtern by...](#)" should be selected.

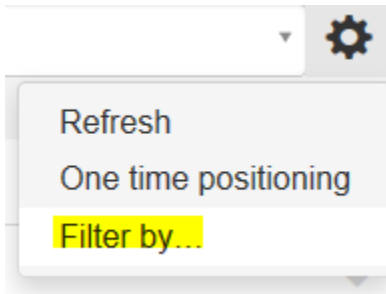

Now the filter dialog opens.

But beware! "Filter by..." is only available if a vehicle was selected before!

Possible filters

The following filters are available:

- **Telemetry messages:** Show telemetry type position messages?
- **Configuration messages:** Show configuration type position messages?
- **FMS/CAN messages:** Show FMS/CAN type position messages?
- **Digitacho messages:** Show digitacho type position messages?
- **Status messages:** Show status type position messages?
- **Area messages:** Show area type position messages?
- **All other:** Show all other position messages?

Filter selection

Filter by...

Please select the filter criterias

Use filter

✓ Telemetry messages

Configuration messages

✓ FMS/CAN messages

Digitacho messages

✓ Status messages

Area messages

✓ All other

Use filter

A filter is activated / deactivated by a simple touch or click.

Selected filters can be identified by a pre-selected check mark and a blue background color.

Once you have made your selection, use the green button above or below to apply the filters in the position list.

Filter status

If a limitation of the displayed position messages via filters is active, this is indicated by an additional info bar below the vehicle selection box:

Display limited by filter

By touch or click on this bar, the containment can be canceled directly. (confirmation is required)