

# Fahrzeuge verbinden

In this module you're able to connect tablets and/or drivers with objects.

## Index

- [Requirements](#)
  - [Generally](#)
  - [Displays](#)
  - [Drivers](#)
- [Functions](#)
  - [connect displays](#)
  - [connect drivers](#)

## Requirements

### Generally

Only administrators are allowed to connect or disconnect.

### Displays

YellowTracker 200 or 500 and Tablets.

### Drivers

YellowTracker 200 or 500 with firmware 1.12.280 or higher.



## Functions

### connect displays

If a solo tablet is connected with a object, it's no more visible in the portal. It's a unit with object. You now have to send messages or orders for example to the object itself.

### connect drivers

Once a driver has been connected to a vehicle that is displayed for the duration of the connection as a registered driver key. A manual authentication on the vehicle is then no longer possible.

| Schaltflächen:                                                                      |                                        |
|-------------------------------------------------------------------------------------|----------------------------------------|
|  | create new quicklink                   |
|  | open this help page                    |
| <a href="#">blocked URL</a>                                                         | create new connection                  |
| <a href="#">blocked URL</a>                                                         | maximum ammount of connections reached |
| <a href="#">blocked URL</a>                                                         | show connection history                |
| <a href="#">blocked URL</a>                                                         | add connection                         |
| <a href="#">blocked URL</a>                                                         | cancel                                 |