

Gebietsüberwachung / KST

By the "geo-fencing" the current GPS location of monitored objects with one or more areas is matched. Enter or leave a vehicle the marked area, a special position message will be triggered.

Index

- [Activate area monitoring](#)
- [Server based alert areas](#)